


TROUBLESHOOTING

FREQUENCY INTERFERENCE

If the fireplace does not respond properly to the remote control, the remote operating frequency may have to be reset. The remote control can send another frequency code to the circuit board to eliminate interference.

1. Simultaneously press the **“SLEEP TIMER DOWN”** button and the **“PURIFIRE LOW SPEED”** button on the remote control.
2. **“COD”** will appear in place of the sleep timer digits.
3. Release the **“SLEEP TIMER DOWN”** button and the **“PURIFIRE LOW SPEED”** button.
4. Press the initialization button on the unit.
5. Press the  button on the remote.

Your remote will now have a different frequency communicating with the fireplace.