


INITIALIZATION/INSTALLATION

INITIALIZING THE REMOTE CONTROL

1. Turn on the electrical power at the circuit breaker.
2. Slide open the battery cover on the back of the remote transmitter.
3. Install three AAA batteries into the remote control. Replace the battery cover.

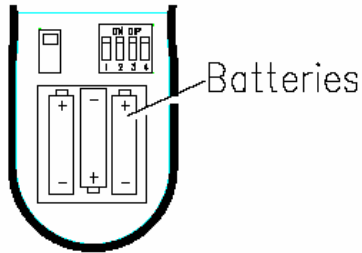

NOTE: The LCD display will flash when new batteries are inserted.

4. Move the remote transmitter close to the fireplace (less than five feet preferred). Press any button on the remote control. The remote is transferring the code to the receiver built into the fireplace. The masonry insert will produce a short beep when it receives the code.
5. Set the clock by depressing the button marked clock (🕒) on the transmitter for two seconds. The hour display will flash.
6. Use the up (▲) and down (▼) buttons to set the hour.
7. Press the clock button again and the minute display will flash.
8. Use the up and down buttons to set the minute.
9. Press the clock button again and the °F or °C display will flash.
10. Use the up and down buttons to select the remote to display temperature in °F or °C
11. Press the clock button again. The remote control is now ready for operation.

BATTERIES

1. The remote control uses 3 AAA size batteries. Replace these batteries at least every 6 months or when the low battery appears on the remote display screen.
2. When batteries are removed wait at least 1 minute before replacing with new batteries.