

## **OPERATION**

1. Turn the fireplace main power switch to the on position prior to using the remote control.
2. Push the ON button to turn fireplace on, push the OFF button to turn the fireplace off.

## **BATTERY REPLACEMENT**

1. To replace the battery, slide battery cover open on the hand held transmitter.
2. Correctly install one 12 volt (A23) battery in the battery holder.
3. Close the battery cover.