

REMOTE CONTROL INITIALIZATION/INSTALLATION

REMOTE CONTROL USAGE

The fireplace is supplied with a radio frequency remote control. This remote control has a range of approximately 50 feet. (15.25m), it does not have to be pointed at the fireplace and can pass through most obstacles (including walls). It is supplied with one of 2178 independent frequencies to prevent interference with other units. The frequency designation is indicated on the back of the transmitter.

This procedure is required every time there is a loss of power to the remote control in the fireplace. (i.e. power failure, breaker tripped, main power switch is turned off)

1. Ensure that power is supplied through main service panel.
2. Locate manual controls (FIGURE 1)
3. Activate main power switch, (“_” position) red indicator light 1 will flash.
4. Press and hold the manual selection switch for five seconds (“_” position) UNTIL the second red indicator light flashes.
5. Press ON button located on the remote control transmitter. This will synchronize the remote control transmitter and receiver.