

OPERATION

The remote control operates the fireplace levels sequentially. The level is increased every time the ON button on the transmitter is pressed. The fireplace can be turned off at any point by pressing the OFF button on the remote control transmitter.

BATTERY REPLACEMENT

1. To replace the battery, slide battery cover open on the hand held transmitter.
2. Correctly install one 12 volt (A23) battery in the battery holder.
3. Close the battery cover.