

1.0 Safety Details

WARNING

05/2015

W L M G R U W D W W R W W W W W W D W D W W W R W W W K B O D G R W G E O D I W R
 W B O R G E L O O D U S U B E E D U R W D L O V B U G W S
 S I R U I R U R M S U R W W L R B R W D N G E D O R W L R I
 W W W S U R G M W S U R G M U W L D O D G W E H R O O R

J D R W B D E B R W L O O E R E D B B R F R W R U B R W E B M O N B G W K
 W G E H S O D L E L D W W R D R L G S R M E O B U R S H W G D B B R Z O L E R U G B W K
 R W D W R M B B L W U L E W R U G B O U R U B A M W H

DANGER

- 5 8 5 B G E F = B 8 = C 5 T E S 5 B = A A E 8 = 5 T E < 5 N 5 F 8 K < = C < K = @ @ F E S I @ T = B S E J E F E D E F S C B 5 @
 = B > I F M C F 8 E 5 T < .

WARNING

- 5 K 5 F B = B G = B 8 = C 5 T E S 5 B = A A E 8 = 5 T E < 5 N 5 F 8 K < = C < C C I @ 8 F E S I @ T = B S E J E F E D E F S C B 5 @
 = B > I F M C F 8 E 5 T < .

CAUTION

- 5 C 5 I T = C B = B 8 = C 5 T E S < 5 N 5 F 8 S C F I B S 5 : E D F 5 C T = C E S K < = C < C C I @ 8 F E S I @ T = B D F C 8 I C T
 C F D F C D E F T M 8 5 A 5 G E C F A = B C F D E F S C B 5 @ = B > I F M .

NOTE

† 05/2015

The safety procedures listed must be followed whenever the Safire 4400-EC-224/115 Grill is being operated, repaired, or serviced. Specific warnings appear throughout this manual and on the Safire 4400-EC-224/115 Grill

Grill Labels

CAUTION - FOR YOUR SAFETY


R U F R G S U R F R U N
 R I O F U F R F N F R F R S U R S U O U R G G
 R O R O F R F I U R P O F U F R O
 E I R U F O R U U Y F R U N G R
 R

OPERATING INSTRUCTIONS

allow timer to time out
 automatically

ATTENTION

E U F O S S U O G O S U G F R U
 T G Y R O O S Y G O Y U
 R G O O U G S F Y G O R U
 S S U O F R U G R T G R Y U P
 O U U S U O F R U G R O I F F R I R U P P
 O U F O G R Y S R U U O P U
 Y R O T Y O G U R E Y
 R U S F R P S U R P U
 S U R F R F R U O U T G F R F O F U T
 E U F U T S U F R U U F P P
 O U U]

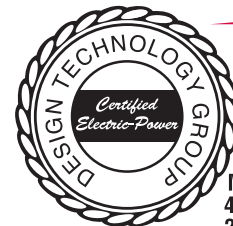

FLAMELESS ELECTRIC GRILLS

MODEL
 4400 EC
 224/115

115 Volts at 16 AMP/1800 Watts
 Outdoor Use Only



7.0 Warranty

WARRANTY

Limited Lifetime, 5 and 1 Year Warranty

The stainless steel grill assemblies of this product are warranted for the lifetime of the grill to the original consumer purchaser from the date of purchase, against defects in materials and workmanship with the recommended care in the owners manual.

The powder coated grill assemblies of this product are warranted to the original consumer purchaser for five (5) years from the date of purchase, against defects in materials and workmanship with the recommended care in the owners manual.

All other components, electrical or mechanical are warranted to the original consumer purchaser for one (1) year from the date of purchase.

This warranty does not cover damage or failures caused by misuse, uncontrolled flare-ups, negligent, commercial use or not following the recommended care and maintenance in the owners manual. If any warranted part fails during its warranty period, call Electri-Chef Grills @ 1-800-442-7207 for repair or replacement at the manufacturer's option without charge. All shipping and handling cost shall be the responsibility of the consumer.

Repair or replacement of a defective component(s) is the sole remedy under this limited warranty. In no event will Electri-Chef be liable for incidental or consequential damages. Some states do not allow the limitation or exclusion of incidental or consequential damages, so this limitation or exclusion may not apply to you.

Any implied warranty of this product shall be limited in duration to one (1) year date of purchase. Some states do not allow limitations on the duration of implied warranty, so this limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Electri-Chef® Grills
P.O. Box 1026
Temple, TX 76503

1.1 Important Safeguards

READ and SAVE THESE INSTRUCTIONS

Do not touch hot surfaces. Use handles or knobs.

To protect against electrical shock do not immerse cord or plugs in water or other liquids.

This appliance should not be used by children.

Unplug from outlet before cleaning. Allow to cool before servicing.

Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.

The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

Do not use appliance for other than its intended use.

Fuel, such as charcoal briquettes, is not to be used with appliances.

Use only on properly grounded outlet.

Do Not Use extension cord.

Clean Drip Tray before each use.

READ and SAVE THESE INSTRUCTIONS

NOTES

5.0 Operating Instructions

Your grill has now been unpacked and assembled. It is now time to plug your grill into a 115 Volts Single Phase 20 amp outlet.



Plug this unit into a properly grounded 115 Volt - Single Phase - 20 AMPS outlet.



Follow the instructions on the Digital Control Grilling System panel of your grill and other suggestions in this section to operate your Safire Model 4400-EC-224/115 Grill.

Your digital control grill illustration (Figure 4a), consists of one (1) Digital Control Grilling System Panel.

Preheat grill 10 - 12 minutes at desired temperature control setting before grilling.

OPERATING INSTRUCTIONS

1. Read owners manual fully before operating this grill
2. Plug into 115 Volts @ 20 amp outlet
3. Press ON button to power on grill
4. The grill will default to a temperature of 350° and a time of 60 minutes.
5. Press the up arrow (▲) to increase temperature or the down arrow (▼) to decrease temperature
6. The grill will automatically power off in 60 minutes. If more grilling time is required, press the ON button before it times out. The grill will reset to 60 minutes and maintain your set temperature.
7. When you are done grilling, press the off button and the grill will shut down.

General notes for above

1. Always check grease tray for excess grease or food particles before each use. If required, remove excess grease or food.
2. It is recommended that all grilling, cooking or baking be accomplished with the grill hood in the closed position.
3. At the completion of any grilling, cooking or baking, do the following:
 - A. Clean cooking grid with soft wire brush of any excess greas and food particles.
4. The Cooking Tips on the right side of the Digital Control Grilling System panel are suggested cooking times.
5. DO NOT allow any corrosive or harsh chemical cleansers to get on the Digital Control Grilling System panel.